TEMPORARY TRAFFIC CONTROL TYPICAL APPLICATION VEHICLE LIGHTING SELECTION CHART

VEHICLE LIGHTING DEVICES													
LEVEL	VEHICLE TYPES	OPTION	SINGLE AMBER FLASHING LIGHT**	AMBER FLASHING BAR LIGHT**	TWO AMBER FLASHING BAR LIGHTS (NOT IN REAR) ***	TWO REAR AMBER FLASHING BAR LIGHTS***	TWO AMBER FLASHING DOME LIGHTS**	FOUR-WAY FLASHERS***	AMBER FLASHING LIGHTS IN GRILL OR TAIL LIGHTS	360 DEGREE VISIBILITY	AMBER & GREEN FLASHING BAR LIGHTS *****	USE	SPECIAL INSTRUCTIONS
ı	PASSENGER CARS, SPORT UTILITY VEH., PICK-UP TRUCKS, ROLLERS, MINIVANS	_	X					X	/	X		• WARNING LIGHTS ON DURING WORK ZONE SET-UP/REMOVAL. • WARNING LIGHTS REMAIN ON IN HIGHWAY WORK ZONE.	*RED AND WHITE LIGHTS TO BE INSTALLED IN ACCORDANCE WITH THE MARYLAND MOTOR VEHICLE LAW. *AMBER FLASHING LIGHT INSTALLATION/USE MUST BE APPROVED BY ENGINEER.
		2		X				×	/	X			
2	UTILITY VEHICLES, CREW CABS, DUMP TRUCKS, PAINT TRUCKS, BRIDGE INSPECTION VEHICLES, GRADERS, CRANES, SWEEPERS, LOADERS, EXCAVATORS, MOWERS, BACKHOES, FORKLIFTS, CARGO VANS, PASSENGER VANS, ETC.	1			X	X		X	/	X		• WARNING LIGHTS ON DURING WORK ZONE SET-UP/REMOVAL. • WARNING LIGHTS REMAIN ON IN HIGHWAY WORK ZONE.	RED AND WHITE LIGHTS TO BE INSTALLED IN ACCORDANCE WITH THE MARYLAND MOTOR VEHICLE LAW. AMBER FLASHING LIGHT INSTALLATION/USE MUST BE APPROVED BY ENGINEER.
		2					X	X	/	X			
		3	X			X		X	/	X			
3	VEHICLES RETROFITTED WITH ARROW PANEL OR PVMS	-				X		X	/	X		• WARNING LIGHTS ON DURING WORK ZONE SET-UP/REMOVAL. • WARNING LIGHTS REMAIN ON IN HIGHWAY WORK ZONE.	• RED AND WHITE LIGHTS TO BE INSTALLED IN ACCORDANCE WITH THE MARYLAND MOTOR VEHICLE LAW. • AMBER FLASHING LIGHT INSTALLATION/USE MUST BE APPROVED BY ENGINEER.
		2					X	X	/	X			
												• WARNING LIGHTS THAT CONFLICT WITH ARROW PANEL OR PVMS SHALL BE TURNED OFF.	MŪST ĒĒ APPRÕVĒD BY ENGINEER.
4	SNOW PLOWS, HIGHWAY MAINTENANCE AND SERVICE VEHICLES WHILE IN USE FOR SNOW REMOVAL OR PROTECTION OF HIGHWAY MAINTENANCE WORKERS	1			X	X		X	/	X		• WARNING LIGHTS REMAIN ON DURING MAINTENANCE OPERATIONS. • WARNING LIGHTS THAT CONFLICT WITH ARROW PANEL SHALL BE TURNED OFF. • RED AND WHITE LIGHTS TO BE INSTALLED IN ACCORDANCE WITH THE MARYLAND MOTOR VEHICLE LA • AMBER AND GREEN FLASHING LIGHTS INSTALLATION/USE MUST BE APPROVE BY ENGINEER.	LIGHTS TO BE
		2					X	X	/	X			THE MARYLAND MOTOR VEHICLE LAW.
		3					X	X	/	X	X		AMBER AND GREEN FLASHING LIGHTS INSTALLATION/USE
		4			X			X	/	X	X		BY ENGINEER.
		5			X		X	\times	/	X	\times		

KEY: X -REQUIRED, /-OPTIONAL

- *FLASHING LIGHT <u>OR</u> FLASHING ROTATING
- **FLASHING LIGHT <u>AND</u> FLASHING ROTATING
- *** ONE FLASHING/ROTATING LEFT AND ONE FLASHING/ROTATING RIGHT

NOTE: REAR AMBER FLASHING LIGHTS SHALL FLASH IN AN ALTERNATING MANNER

****IF A VEHICLE DOES NOT HAVE STANDARD EQUIPPED FOUR-WAY FLASHERS, THEY ARE NOT REQUIRED

NOTE: ADDITIONAL LIGHTS SHOULD BE ADDED TO THE VEHICLE TO OUTLINE OBSTACLES ATTACHED TO THE VEHICLE SUCH AS A BLADE OR TRAILER

******USE OF AMBER AND GREEN LIGHTS MUST BE SYMMETRICAL AND BE DISPLAYED IN AN ALTERNATING PATTERN.

DEVICE DESCRIPTIONS:

ROTATING LIGHTS - DEVICE DESIGNED TO PROJECT LIGHT ON A SWEEPING 360 DEGREE ARC.

LIGHT BAR - A HOUSING UNIT OR GROUP OF HOUSINGS OR UNITS CONTAINING AMBER LIGHTS OR LENSES WITH ONE OR MORE FLASHING WARNING LIGHTS IN EACH HOUSING.

FLASHING LIGHT - DEVICE THAT EMITS LIGHT IN PULSES AT A RATE NOT TO EXCEED 5 PULSES PER SECOND (5 Hz).

4-WAY FLASHERS - LIGHTS INSTALLED ON VEHICLES, REFERRED TO AS HAZARDS, THAT FLASH AT A CERTAIN RATE WHEN ACTIVATED.

NOTE: LIGHTS SHALL BE CLASS LAS DEFINED BY THE SOCIETY OF AUTOMOTIVE ENGINEERS (SAE).

SPECIFICATION CATEGORY CODE ITEMS MARYLAND DEPARTMENT OF TRANSPORTATION STATE HIGHWAY ADMINISTRATION **APPROVED** STANDARDS FOR HIGHWAYS AND INCIDENTAL STRUCTURES APPROVAL SHA APPROVAL FEDERAL TEMPORARY TRAFFIC CONTROL HIGHWAY ADMINISTRATION VEHICLE LIGHTING SELECTION CHART APPROVAL 7-1-09 APPROVAL 7-27-09 4-19-10 REVISED REVISED REVISED 2-19-24 REVISED 12-06-23 STANDARD NO. MD 104.01-18B REVISED REVISED