



WIRING DIAGRAM (FIREHOUSE)

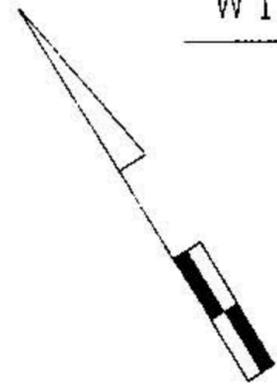

(NOTE: EMT IS TO BE INSTALLED OVER DROP CEILING)

INSTALL 1" GALV. CONDULET. ENTER NO MORE THAN 1' FROM GROUND.

OUTSIDE

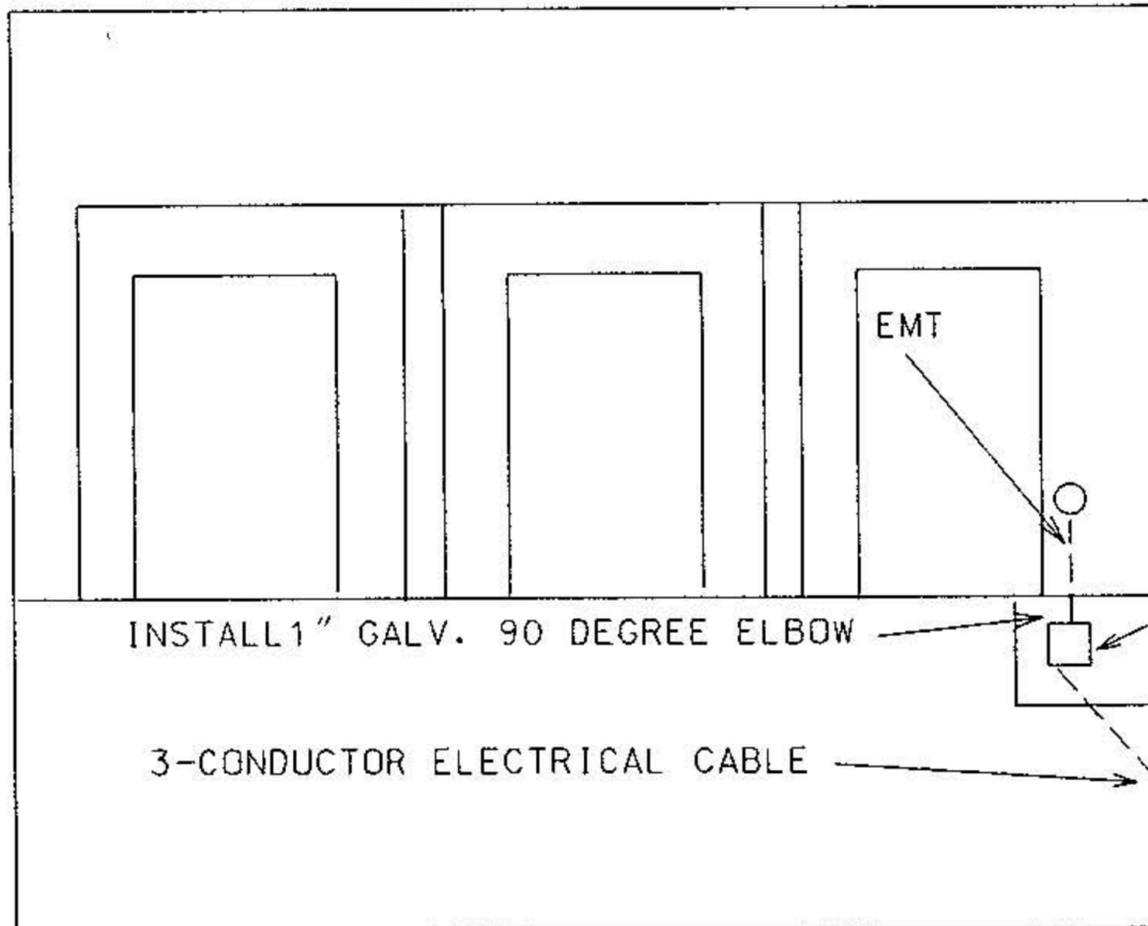

INSTALL 1" GALV. 90 DEGREE ELBOW


3-CONDUCTOR ELECTRICAL CABLE

EMT

REMOVE AND INSTALL SIDEWALK PRIOR TO INSTALLING HANDBOX.

INSIDE

JACKSONVILLE VOL. FIRE DEPARTMENT

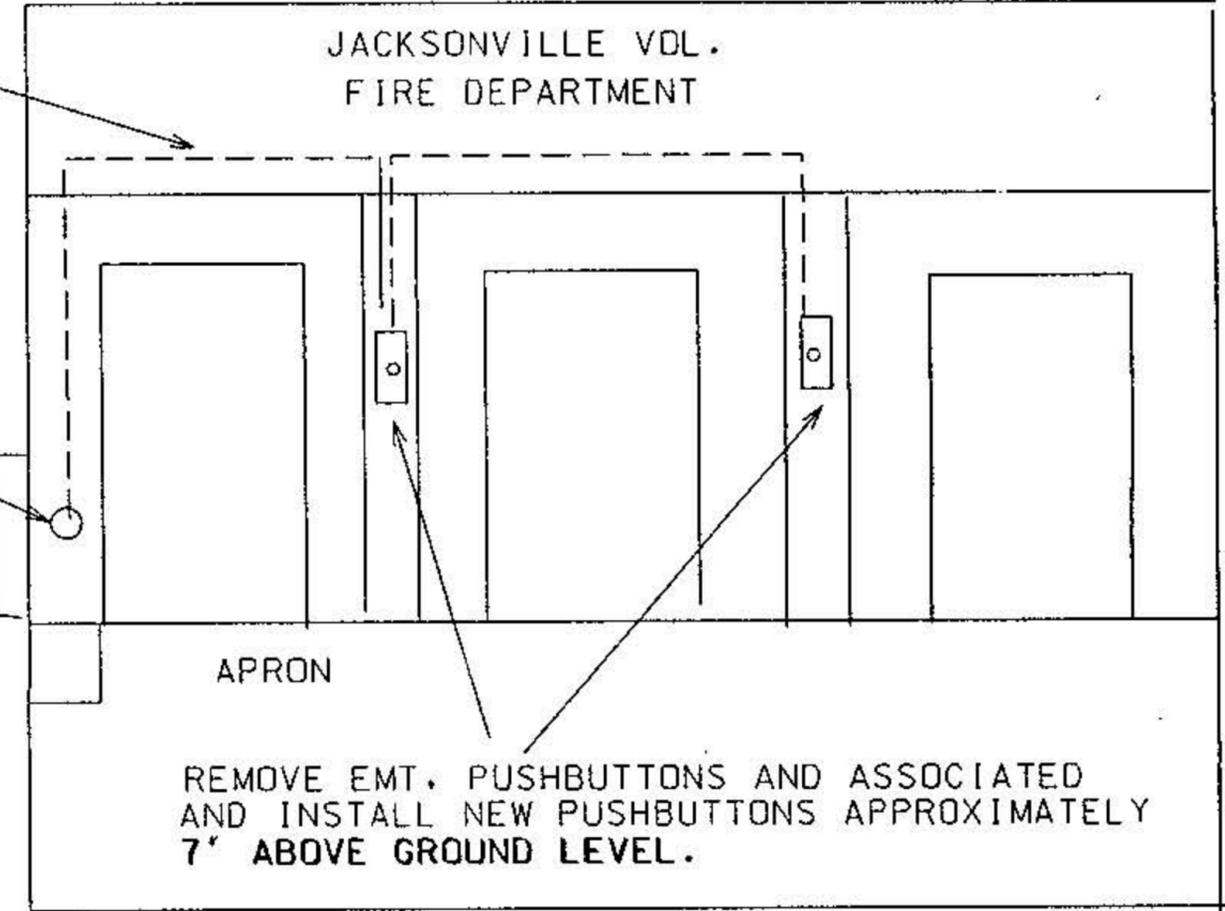

APRON

REMOVE EMT, PUSHBUTTONS AND ASSOCIATED AND INSTALL NEW PUSHBUTTONS APPROXIMATELY 7' ABOVE GROUND LEVEL.

MARYLAND DEPARTMENT OF TRANSPORTATION
OFFICE OF TRAFFIC & SAFETY
TRAFFIC ENGINEERING DESIGN DIVISION

MD 145 @ JACKSONVILLE VOL. FIRE DEPARTMENT
BALTIMORE COUNTY TS # 4838,4839

DATE
07-22-93

DRAWN BY
MEL

CONTRACT NO.